

## Bail Inspection

Greater care must be afforded to inspecting the saddle portion of the bail for wear.

1. This is the area of the bail that contacts the crane hook (see illustration below).
2. **DO NOT USE** if the saddle measures less than 80% (4/5) of the original dimension. Refer to the certified drawing for the original dimension.
3. Inspect for indication of structural fatigue, including but not limited to:
  - a. Cracks in and around the welds.
  - b. General deformation of the structure.

**DO NOT USE**  
**IF LESS THAN 80%**  
**OF ORIGINAL**  
**DIMENSION**

