



MOTOR DRIVEN LIFTING BEAM LUBRICATION & MAINTENANCE INSTRUCTIONS

1. Coat teeth of rack and pinion every two months. Use Jet Lube gear guard open gear lubricant.
2. Lubricate slides and slide ways every two months using Benz Oil, Moly Alumaplex EP No. 2 high duty cycles may require more frequent lubrication.
3. Lubricate sheave bearings as required depending on the duty cycle.
4. Check rack pinion and rotate drive gears for wear every six months. Replace if necessary.
5. Check entire unit for wear, loose bolts, etc., every three months.
6. Check oil level in reducer or gear motors every six months. If low, fill according to manufacturer's recommendation.
7. Lubricate flange bearings with ep no two grease every six months.

When ordering replacement parts or inquiring about the lifter, please refer to serial number shown on the identification tag on lifter.