



## MODEL MR2028 ROTATING WHEEL LIFTER OPERATING INSTRUCTIONS

Bushman AvonTec rotating lifters are furnished with clutches on the reducer output shafts.

Before putting a lifter into service, test it with a test load, and adjust the clutches with supplied wrench to eliminate excess slippage.


Clutches should be adjusted according to the specification sheets in the manual.

**Note:**

There are two types of clutches and each is adjusted differently. Clutch adjustment may be necessary during initial operation or clutch break-in period.

**Warning:**

**Do not over tighten the clutch. This may result in damage to drive components.** See the clutch adjustment instructions in the manual.

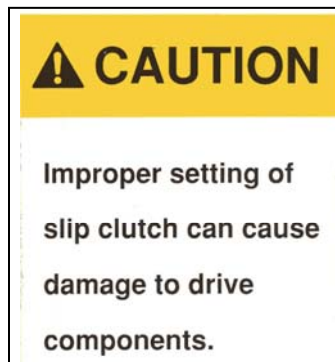

When ordering replacement parts or inquiring about the lifter, please refer to the serial number and model number shown on the identification tag, as shown below.

